

# MEGA<sup>LITE</sup>

## STINGER SCAN-150



## USER MANUAL

### Table of Contents

Safety Information	2
Technical Information	3
Main Power Connection	4
DMX-512 Connection	4
Gobos	5
Color	5
Size and Weight	5
Main Control Menu	6
DMX Profile	8
Rigging the Fixture	10
Cleaning & Maintenance	10
Parts List	10

Check that the unit has not been damaged during transport




Read all cautions and warnings  
prior to operation of this  
equipment

#### Protection Against Fire



1. Maintain a minimum of 1 foot distance from any type of flame.
2. For indoor use only do not expose unit to rain or moisture.
3. Replace fuse only with the specified type and rating.
4. Do not install the unit too close to a heat source.
5. Make sure cables are properly secured
6. Maximum surface operating temperature 130°.

#### Protection Against Electrical Fire

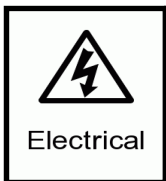

1. Disconnect power before servicing.
2. For connection to main power supply proceed to page 5.
3. This unit must be earthed. (electronically grounded)
4. This fixture must not be left on for long periods of time.

#### Protection Against Mechanical Hazards



1. Use secondary safety chain when hanging unit.
2. Use quality clamps or bolts when positioning unit
3. Do not open unit while it is on, risk of electrical shock.

## What is Included

1pc Stinger Scan 150 Fixture  
1pc Power Con (type) to Nema 5-15 Cable  
1pc Safety Eyebolt  
1pc User Manual

# Technical Information

## Part Numbers

---

### Fixture

**1205-Stinger Scan 150**

### Road Case

**CAS-1205-4 4 Unit Road Case**

## Mechanical Specifications

---

<b>Pan Angle:</b>	180°
<b>Tilt Angle:</b>	40°
<b>DMX Connectors:</b>	Panel Mounted 3pin XLR connectors in/out (5 pin Optional)
<b>Power Connections:</b>	Panel Mounted Power Conn (Type) Power in/out connection. (Nema 5-15 to Power Conn (Type) cable included)
<b>Thermal:</b>	Maximum ambient temperature 104°f Maximum surface temperature 140°f
<b>Display:</b>	Digital
<b>Fastening System:</b>	Mounting Yoke
<b>Lens Angle:</b>	15°
<b>Colors:</b>	8 Colors + Open
<b>Rotating Gobos:</b>	7 Removable, Bi Directional, Indexing
<b>Prism:</b>	4 Facet, Rotatable, Indexing
<b>Focus:</b>	Mechanical Focus

## Electrical Specifications

---

<b>LED Type:</b>	150W Single Color
<b>Power Input:</b>	Universal 100 - 240V 50/60 Hz
<b>Ballast:</b>	Electronic
<b>Power Consumption:</b>	<b>Watts: 272W</b> <b>Amps: 2.3A</b>
<b>Cooling:</b>	Fan Cooling
<b>Fuse:</b>	F5A 250V

## Control & Programming

---

<b>Protocol:</b>	DMX 512
<b>RDM:</b>	Yes
<b>DMX Channels:</b>	2 Mode of Operation <b>Mode: 11 Ch:</b> Pan, Tilt, Pan and Tilt Speed, Dimmer, Strobe, Color, Gobo, Gobo Rotation, Focus, Prism, Prism Rotation <b>Mode: 15 Ch:</b> Pan, Pan Fine, Tilt, Tilt Fine, Pan and Tilt Speed, Dimmer, Strobe, Color, Gobo, Gobo Rotation, Focus, Prism, Prism Rotation, Macro, Control
<b>Operating Mode:</b>	Stand alone 255 step dimmer setting via display Recall Auto Programs



## Main Power Connection

### Caution!

1. Do not connect fixture to a dimmer system.
2. This unit has Auto switching power supply. It will respond to 110V or 240V automatically.
3. This unit must be earthed. (electronically grounded)
4. Replace fuse only with the specified type and rating.
5. Power Link 6 units at 110V and 12 units at 220V

The occupation of the connection-cable is as follows:


This fixture is equipped with an electronic power supply that will let the unit operate from 100V to 240V from 50Hz to 60Hz

Cable (USA)	Cable (EU)	Pin	110V	220V
Black	Brown	Live	L	L
White	Light Blue	Neutral	N	L
Green	Yellow/Green	Ground		

## DMX-512 Connection


The fixture is equipped with 3 pin XLR cable mounted sockets for DMX input and output. The sockets are wired in parallel. Only use a shielded twisted pair cable designed for RS-485 3 pin XLR plugs and connectors in order to connect the controller with the fixture or the fixture with another.

### DMX—Input

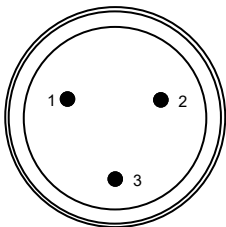

### DMX—Output

1. Shield
2. Signal (-)
3. Signal (+)
4. N/A
5. N/A

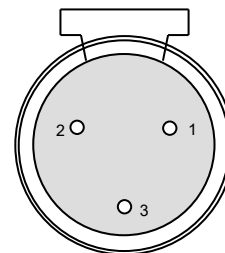


### Caution!

At the last fixture the DMX signal needs to be terminated with a terminator. Solder a 120 Ohm resistor between the (-) and the (+) signal into a 3 or 5 pin XLR plug and plug it in to the last fixture on the signal run. Pre-manufactured terminator plugs are available for purchase from your Mega-Lite dealer (P-DMXT).

## Gobos

Gobo	
Image Size	17 mm
Diameter Size	19.8 mm


Gobos may be removed by removing the display front cover. And slightly lifting the gobo tray off the gobo holder. The gobo spring holder will need to be removed and a new gobo can be installed.

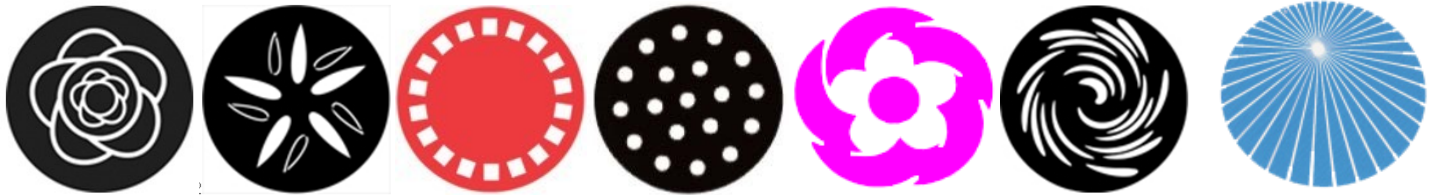

## Colors




## Size and Weight

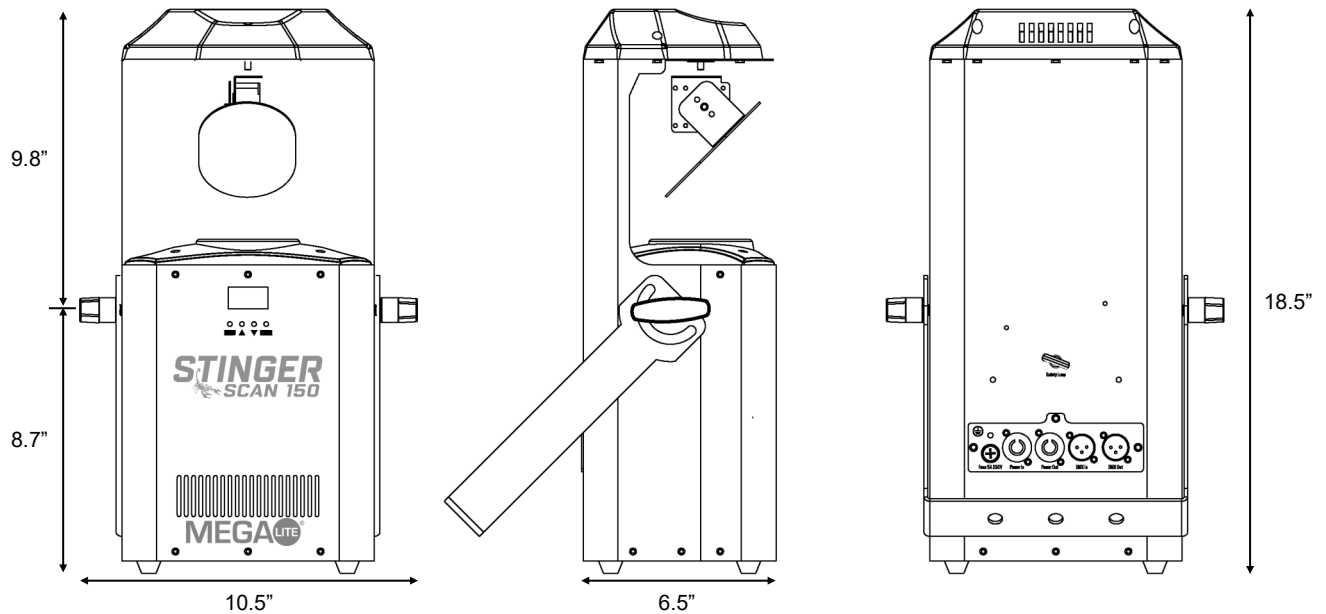

Size	10.5" X 6.5" X 18.5"
Weight	16.5lb
Packaged	23.25" X 12" X 10" 20lb

# Main Control

The control board on the fixture base is your interface to access and control all the functions on the unit. Its LCD display gives you a code view of the options and functions. The following will explain each function and its options. Press Enter to Enter Main Menu

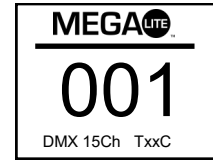

Menu Down Up Enter



<p style="text-align: center;">System Settings</p> <hr/> DMX Address <input checked="" type="checkbox"/> Channel Mode Running Mode Programs Manual Settings Systems Info	<h3>DMX Address</h3> <div style="border: 1px solid black; padding: 5px; text-align: center;"> DMX Address  <hr/> <span style="font-size: 2em;">001</span> </div>	<p><b>Address:</b>      A Use the up and down button to set the fixtures start channel. Fixture will need to match the DMX Controllers Strat Channel. (0-512)</p>
--	--	---

<p style="text-align: center;">System Settings</p> <hr/> DMX Address Channel Mode <input checked="" type="checkbox"/> Running Mode Programs Manual Settings Systems Info	<h3>Channel Mode</h3> <div style="border: 1px solid black; padding: 5px;"> DMX Channel  <hr/> DMX 11 CH <input type="checkbox"/>  DMX 15 CH <input checked="" type="checkbox"/> </div>	<p><b>Channel Mode:</b> Use the up and down button to set the fixtures operating mode. Select from 11 or 15 Channel mode operation. Confirm with the DMX Controller you are using matching operational mode</p>
--	--	---

<p style="text-align: center;">System Settings</p> <hr/> DMX Address Channel Mode Running Mode <input checked="" type="checkbox"/> Programs Manual Settings Systems Info	<h3>Running Mode</h3> <div style="border: 1px solid black; padding: 5px;"> Running Mode  <hr/> DMX <input type="checkbox"/>  Auto <input checked="" type="checkbox"/>  Sound  Manual </div>	<p><b>DMX:</b>      This selection will operate the fixture on DMX Mode</p> <p><b>Auto:</b>      When the fixture is in Auto mode the fixture will run on the reset auto program set via display in the Auto Programs Display setting.</p> <p><b>Sound:</b>      Fixture will run preset function and will be triggered via internal Micro phone.</p> <p><b>Manual:</b>      When the fixture is in Manual mode the fixture will run the manually selected function that is set on the Manual Display Setting</p> <p><b>Test:</b>      Fixture will run test program to ensure all function are operating correctly</p>
--	---	---

<p style="text-align: center;">System Settings</p> <hr/> DMX Address Channel Mode Running Mode Programs <input checked="" type="checkbox"/> Manual Settings Systems Info	<h3>Programs</h3> <div style="border: 1px solid black; padding: 5px;"> Programs  <hr/> Program 1 <input checked="" type="checkbox"/>  -  Program 9 </div>	<p><b>Programs:</b>      This function allows user to run built in programs. Please select from 1 to 9</p>
--	---	--

<div style="border: 1px solid black; padding: 2px; text-align: center; font-weight: bold;">System Settings</div> DMX Address Channel Mode Running Mode Programs Manual <span style="float: right;">■</span> Settings Systems Info	<h2 style="margin: 0;">Manual</h2> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><th colspan="2" style="text-align: center;">Manual</th></tr> <tr><td>Pan</td><td style="text-align: right;">000</td></tr> <tr><td>Pan Fine</td><td style="text-align: right;">000</td></tr> <tr><td>Tilt</td><td style="text-align: right;">000</td></tr> <tr><td>Tilt Fine</td><td style="text-align: right;">000</td></tr> <tr><td>P/T Speed</td><td style="text-align: right;">000</td></tr> <tr><td>Dim</td><td style="text-align: right;">000</td></tr> </table>	Manual		Pan	000	Pan Fine	000	Tilt	000	Tilt Fine	000	P/T Speed	000	Dim	000	<p><b>Manual:</b> Allows user to access the fixtures functions via display. Each function will have 0-255 adjustable value. Press Enter to confirm and the set position. Settings will be recalled when fixture is in Manual Running Mode .</p>
Manual																
Pan	000															
Pan Fine	000															
Tilt	000															
Tilt Fine	000															
P/T Speed	000															
Dim	000															

<div style="border: 1px solid black; padding: 2px; text-align: center; font-weight: bold;">System Settings</div> DMX Address Channel Mode Running Mode Programs Manual Settings <span style="float: right;">■</span> Systems Info	<h2 style="margin: 0;">Settings</h2> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><th colspan="2" style="text-align: center;">Settings</th></tr> <tr><td>Pan Invert</td><td></td></tr> <tr><td>Tilt Invert</td><td></td></tr> <tr><td>Display Invert</td><td></td></tr> <tr><td>Backlight</td><td></td></tr> <tr><td>Sensitivity</td><td></td></tr> <tr><td>DMX Fail</td><td></td></tr> <tr><td>Calibration</td><td></td></tr> <tr><td>Factory Reset</td><td></td></tr> <tr><td>Reset Motors</td><td></td></tr> </table>	Settings		Pan Invert		Tilt Invert		Display Invert		Backlight		Sensitivity		DMX Fail		Calibration		Factory Reset		Reset Motors		<p><b>Pan Invert:</b> Reverse the Pan direction (No-Yes)</p> <p><b>Tilt Invert:</b> Reverse the Tilt direction (No-Yes)</p> <p><b>Display Invert:</b> Reverse the direction of the display (No-Yes)</p> <p><b>Backlight:</b> Display turn off after a short time of no use or display to remain on (On-Off)</p> <p><b>Sensitivity:</b> Internal Microphone Bass sensitivity to reach to the internal programs (0-100)</p> <p><b>DMX Fail:</b> If DMX signal is lost when in DMX Mode the Off will turn off the fixtures channel to 0 or Hold will hold the last DMX command sent. (Off-Hold)</p> <p><b>Calibration:</b> Enter Pass Word (018) This function will allow you to calibrate the fixtures motor functions (this function is reserved for trained technicians)</p> <p><b>Factory Reset:</b> Reset fixture to original factory display settings (Yes-No)</p> <p><b>Reset Motors:</b> Resets all motors to original home position</p>
Settings																						
Pan Invert																						
Tilt Invert																						
Display Invert																						
Backlight																						
Sensitivity																						
DMX Fail																						
Calibration																						
Factory Reset																						
Reset Motors																						

<div style="border: 1px solid black; padding: 2px; text-align: center; font-weight: bold;">System Settings</div> DMX Address Channel Mode Running Mode Programs Manual Settings Systems Info <span style="float: right;">■</span>	<h2 style="margin: 0;">System Info</h2> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr><th colspan="2" style="text-align: center;">System Info</th></tr> <tr><td>Software V</td><td style="text-align: right;">Vs</td></tr> <tr><td>Mode</td><td style="text-align: right;">DMX</td></tr> <tr><td>Address</td><td style="text-align: right;">001</td></tr> </table>	System Info		Software V	Vs	Mode	DMX	Address	001	<p><b>System:</b> Will Display fixture current status</p>
System Info										
Software V	Vs									
Mode	DMX									
Address	001									

# DMX Profile

## Stinger Scanner 150 DMX Profile

11 Ch Mode	15 Ch Mode	Function	Description	Value	Init
1	1	Pan	Pan 0-180°	0-255	127
	2	Pan Fine	Pan Fine	0-255	127
2	3	Tilt	Tilt 0-40°	0-255	127
	4	Tilt Fine	Tilt Fine	0-255	127
3	5	Pan Tilt Speed	Pan & Tilt Speed (fast to slow)	0-255	0
4	6	Dimmer	Dimmer (off to full)	0-255	255
5	7	Shutter / Strobe	No Function	0-3	255
			Strobe (slow to fast)	4-99	
			Pulse Strobe (slow to fast)	100-149	
			Pattern Strobe (slow to fast)	150-199	
			Random Strobe (slow to fast)	200-249	
6	8	Color	Open	250-255	0
			Open	0-8	
			Open / Red	9-15	
			Red	16-22	
			Red / Blue	23-29	
			Blue	30-36	
			Blue / Lavender	37-43	
			Lavender	44-50	
			Lavender / Magenta	51-57	
			Magenta	58-64	
			Magenta / Yellow	65-71	
			Yellow	72-78	
			Yellow / Orange	79-85	
			Orange	86-92	
			Orange / Light Green	93-99	
			Light Green	100-106	
			Light Green / Light Blue	107-113	
			Light Blue	114-120	
			Light Blue / Open	121-127	
			Color Scroll Clockwise (slow to fast)	128-189	
Stop	190-193				
Color Scroll Counter Clockwise (fast to slow)	194-255				
7	9	Gobo	Open	0-14	0
			Gobo 1	15-29	
			Gobo 2	30-44	
			Gobo 3	45-59	
			Gobo 4	60-74	
			Gobo 5	75-89	
			Gobo 6	90-104	
			Gobo 7	105-119	



7	9	Gobo	Gobo 1 Shake (slow to fast)	120-129	0
			Gobo 2 Shake (slow to fast)	130-139	
			Gobo 3 Shake (slow to fast)	140-149	
			Gobo 4 Shake (slow to fast)	150-159	
			Gobo 5 Shake (slow to fast)	160-169	
			Gobo 6 Shake (slow to fast)	170-179	
			Gobo 7 Shake (slow to fast)	180-189	
			Gobo Scroll Clockwise (fast to slow)	190-221	
			Stop	222-223	
			Gobo Scroll Counter Clockwise (slow to fast)	224-255	
8	10	Gobo Rotation	Gobo Index	0-127	0
			Gobo Rotation Clockwise (fast to slow)	128-188	
			Stop	189-193	
			Gobo Rotation Counter Clockwise (fast to slow)	191-255	
9	11	Focus	Focus	0-255	127
10	12	Prism	Open	0-127	0
			Prism	128-255	
11	13	Prism Rotation	Prism Index	0-127	0
			Prism Rotation Clockwise (slow to fast)	128-255	
	14	Macro	No Function	0-15	0
			Macro Program 1	16-41	
			Macro Program 2	42-67	
			Macro Program 3	68-93	
			Macro Program 4	94-115	
			Macro Program 5	116-141	
			Macro Program 6	142-167	
			Macro Program 7	168-193	
			Macro Program 8	194-209	
			Macro Program 9	210-219	
Audio Trigger	220-255				
	15	Control	No Function	0-250	0
			All Motor Reset (Hold for 5 Seconds)	251-255	

## Rigging the Fixture

### Caution!

1. The installations must be carried out by an authorized dealer or trained professional.
2. Unit may cause severe injures if you have doubts concerning the safety do not install.
3. Unit is to be 24inches away from flammable materials (decoration material)
4. Use high quality installation equipment to hang unit.

When rigging a unit it is very important that you follow common safety procedures. Rigging requires extensive experience including but not limited to calculating working loads, material being used and periodic safety inspections. If you lack these qualifications, do not attempt the installation yourself, instead use a professional structural rigger.

When rigging the unit always be secured with a secondary safety attachment. The installation location of the projector has got to be built in the way that it can hold 10 times the weight for 1 hour with out any harming. Installation should be checked at least one time a year by a skilled person.

## Cleaning and Maintenance

**Installation Maintenance:** The operator has to make sure that the unit is operating safely and has the installations and electronics checked by an expert every 2 years.

The following points have to be considered during the inspection:

- 1) All screws used for installing the device or part of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, fixation and installation spots (ceiling, suspension, trussing).
- 3) The electronic power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments.

**Note:** There is no serviceable parts inside the device. Maintenance and service operations are to be carried out by authorized dealers.

**Replacing the fuse:** When possible only replace the fuse with the same type and rating.

**Replacing the power cable:** If the power cable of this device becomes damaged, it has to be replaced by authorized dealers or trained professional only.

**Should you have further questions , please contact your dealer.**

## Part List & Accessories

Part Number	Description
1205-PCB-DIS	DISPLAY PCB
1205-PCB-DRI-LED	LED DRIVER PCB
1205-PCB-DRI-MOT	MOTOR FUNCTIONS PCB
1205-LED	REPLACEMENT LED
1205-POW	POWER SUPPLY
1205-MIR	MIRROR ASSEMBLY WITH METAL BASE
1205-FAN	REPLACEMENT FAN
1205-MOT-PAN	PAN MOTOR
1205-MOT-TILT	TILT MOTOR
1205-BEZ-TOP	PLASTIC HOUSING TOP
1205-BEZ-LEN	PLASTIC HOUSING LENS HOLDER

### Accessory

1205-ACC-YOK Short Yoke



## MEGA Systems, Inc. Warranty

**MEGA SYSTEMS INC** (“MSI”) hereby warrants to the original purchaser/owner (“Customer”), MSI products to be free of manufacturing defects in material and workmanship, for the warranty periods as defined below from the original purchase invoice date. This warranty applies exclusively to new MSI branded and/or distributed products listed below, purchased from an MSI AUTHORIZED dealer/ reseller. This warranty is not transferable and may or may not apply to products sold and/or forwarded outside the United States. Please contact MSI for applicable regional product warranty information.

The purchase of MSI product constitutes the Customer’s acceptance of all warranty terms and conditions as listed in this limited warranty statement. This warranty provides the Customer with legal rights, which may vary from state to state. Please contact MSI regarding warranty questions prior to purchasing.

Product / Series	Warranty Period	Coverage
Battery Powered LED	Six month battery, one year all other components	1, 2
Moving LED, Hazers	One year	2
Outdoor IP-Rated LED	Two years	3
House Light LED, Decorative LED, Compact LED, iCandy LED, Theatrical LED, Strobe Wash LED, Follow Spot LED, Lighting Control, Direct View LED Displays and Video Control	Three years	4
<p><b>1. Battery: 183 days/six months</b></p> <p><b>2. Parts and Labor: 365 days/one year</b></p> <p><b>3. Parts and Labor: 730 days/two years</b></p> <p><b>4. Parts and Labor: 1095 days/three years</b></p>		
<p><b>This limited warranty excludes any defects caused by, resulting from or relating to the following:</b></p> <p>Normal wear and tear of lamps, color media, brushes, contact rings, lamp sockets, belts and other parts prone to wear and tear.</p> <p>Misuse, abuse, improper handling, accident, alteration or attempts to repair by or on behalf of the owner or any person not authorized by MSI.</p> <p>Damage to the product resulting from acts of God, including, but not limited to, earthquakes, hurricanes, tornados, lightning and other natural disasters, fire, explosion, flood, riots, civil disorder or any other cause beyond the reasonable control of MSI.</p> <p>Exposure to harsh or excessively corrosive environmental conditions (whether indoors or outdoors), including, but not limited to, extreme temperatures, humidity, atmospheric conditions (including salinity or pressure), radiation (UV, infrared or nuclear), shock and conditions which exceed the product's Ingress Protection (“IP”) rating.</p> <p>Use of the product in a manner which exceeds the applicable product specification, including, but not limited to, exposure to excessive, insufficient or other voltage conditions.</p> <p>Installation or use of the product not in accordance with the technical documentation, MSI guidelines (as may be posted on its website at <a href="http://www.megasystemsinc.com">www.megasystemsinc.com</a> from time to time or otherwise designated by MSI or its brands) or applicable building and electrical codes, regulations and standards.</p> <p>Failure to maintain the product in accordance with the technical documentation.</p> <p>Natural degradation and color shift of the LED source over the course of normal product use.</p> <p>Slight deviations in the specified values of intensity and color that do not affect the functionality of the product.</p> <p>Use of the product not for its intended purpose.</p>		

All warranty claims are evaluated under the terms of this limited warranty. If a product falls within the warranty period and if, upon examination by MSI it is found to have failed for a covered cause, MSI will, at its sole discretion, repair or replace the defective part or product or reimburse the purchaser a pro-rated portion of the purchase price based on the percentage of the warranty period still remaining as of the date that the returned product was received by MSI. Should a replacement part or product be discontinued or unavailable, MSI reserves the right, in its sole and absolute discretion, to substitute a comparable replacement part or product for the defective part or product. MSI warranty obligation hereunder is limited solely to the repair or replacement of or reimbursement for the particular parts or products determined by MSI to have failed for a covered cause within the warranty period. In no event shall MSI be responsible to replace or reimburse purchaser for any products or portions of a system that MSI determines has not failed for a covered cause within the warranty period, even if such other products or portions of a system are used together with products being repaired or replaced by MSI under this warranty and the repaired product differs in brightness, colors or any other attribute after the repair.

Costs of removal, shipping to MSI or its authorized representative and reinstallation are solely the responsibility of the purchaser. If MSI determines that the product is covered by this limited warranty, it will only pay for parts and labor as indicated by product type. If MSI determines that the product is not covered by this limited warranty, the purchaser will have the option of paying for the repair (if the product can be repaired) and the purchaser shall be responsible for the cost of shipping the repaired product back to the purchaser. MSI reserves the right, in its sole and absolute discretion, to decline any repair.

IN NO EVENT SHALL MEGA SYSTEMS, INC. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR PUNITIVE LOSS OR DAMAGE OF ANY KIND, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUES, LOSS OF USE OF THE PRODUCT OR ANY OTHER GOODS OR ASSOCIATED EQUIPMENT, DAMAGE TO ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF SUBSTITUTE PRODUCTS, FACILITIES OR SERVICES, DOWN TIME COST, INSTALLATION OR LABOR COSTS, OR CLAIMS OF THE PURCHASER'S CUSTOMERS, WHETHER BASED ON WARRANTY, CONTRACT OR NEGLIGENCE, ARISING IN CONNECTION WITH THE SALE, USE OR REPAIR OF THE PRODUCT. MEGA SYSTEMS INC'S MAXIMUM LIABILITY SHALL NOT, IN ANY CASE, EXCEED THE PURCHASE PRICE OF THE PRODUCT THAT GIVES RISE TO THE CLAIM.

EXCEPT FOR THE LIMITED WARRANTY SET FORTH HEREIN, ALL PRODUCTS SOLD BY MEGA SYSTEMS, INC. ARE SOLD “AS IS” WITHOUT ANY WARRANTY, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ALL OF WHICH ARE EXPRESSLY AND SPECIFICALLY DISCLAIMED BY MEGA SYSTEMS, INC.

## Customer Support

Mega Lite has a customer support line to provide set up help and to answer any question should you encounter a problem. Please visit our website for any other related technical documents. For service related issue please contact our service dept.

Monday—Friday 9am to 6pm CST  
Voice: 210-684-2600  
E-mail: [service@megasystemsinc.com](mailto:service@megasystemsinc.com)

## Manual Version

Please Visit [www.mega.lighting](http://www.mega.lighting) for the most up to date manual version

Document Version	Date	Fixture Software	Notes
1.0	10/01/2022	V1.0	



Mega-Lite  
18668 Highway 16N  
Helotes, Texas 78023  
Ph 210-684-2600 Fax 210-855-6279  
[www.mega.lighting](http://www.mega.lighting) / [info@mega.lighting](mailto:info@mega.lighting)